


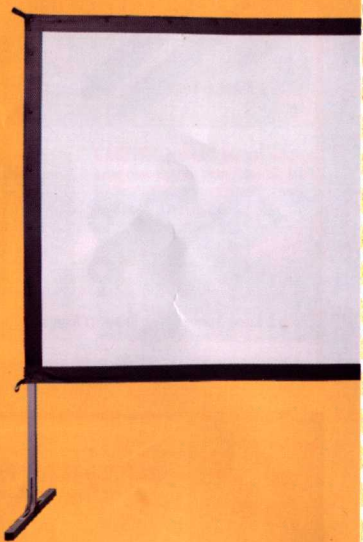

JWSIT Screens

QUICK START GUIDES



JWSIT's Customer Service

NIGHTTIME HOTLINE
86 13038835964

EMAIL
3360242292@qq.com


ALL PARTS



ASSEMBLY

STEP 1 Unfold the Folding Frame.


On a flat surface,
Unfold the longer
sections first.

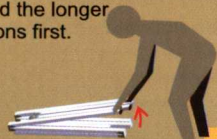

Simply lift it.




The latches will "click" into place.

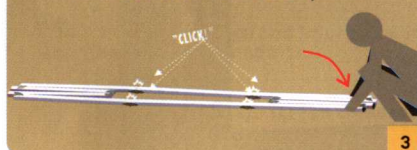

CAUTION ⚠ Watch out for pinching!
Keep your fingers away from the joints!



Unfold the shorter sections.

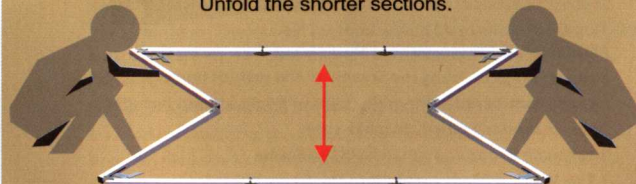

CAUTION


WATCH OUT FOR PINCHING
in some steps of assembly!



AT LEAST 2 ADULTS REQUIRED
to assemble this product!




The latches will "click" into place as well.

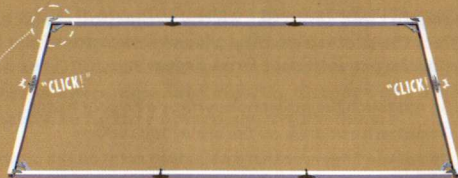

5

Press every hinged support bar at the corners to make them straight instead of bending.

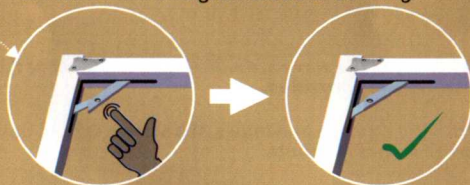


6

STEP 2 Unfold the Folding Legs.

Unfold the **Legs** into "T" shape.
Press the hinged support bars to make them straight.



STEP 3 Stretch & snap the Projection Screen Material.

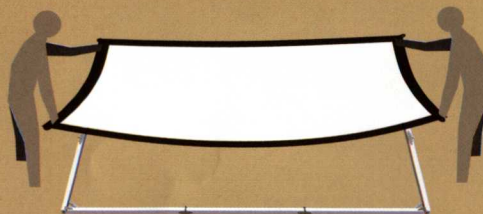


Unfold the **Screen Material**.
Please be careful not to stain the screen material.

1

Fasten the buttons in the following order:

AB → CD → EF → GH

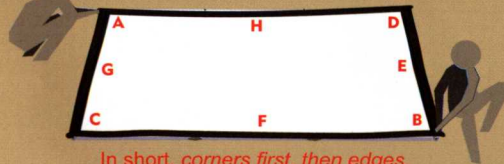

In short, corners first, then edges.


For early times using, you may have to pull it hard to stretch the material. Pull the border with one hand, and snap the button with the other hand as shown in the photos.



2

STEP 4 Set up.

Screw both **Support Rings**  in at the top of the **Frame**.
Tie the **Guide Ropes** to the **Support Rings**.

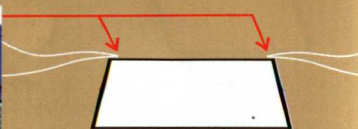


1

Insert the **Legs**
into the openings
of the **Frame**.



Lift it up.

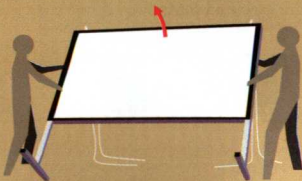


Screw both **Knob Screws**
in at the joints between the
Legs and the **Frame**.




2

You can insert the **Ground Stakes** into lawn or other soft soil
ground if extra stability is needed.

(Please noted the stakes can not be used on cement floor.)

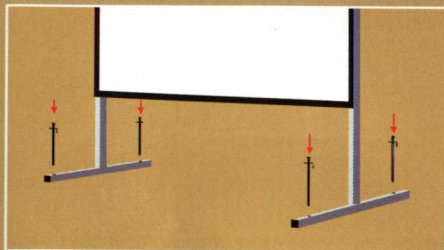


Insert the
Ground Stakes
into grassland
by hammer or
simply by your
hands.



Tie the **Guide Ropes** to
the **Ground Stakes** to prevent
the screen from
tilting or falling over.


You can tie the **Guide Ropes** in different ways according to the environment:

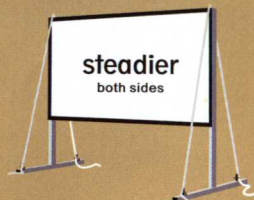


3

DISASSEMBLY

- 1 Remove the **Guide Ropes** and **Ground Stakes** from the ground.
- 2 Slowly put down the screen.

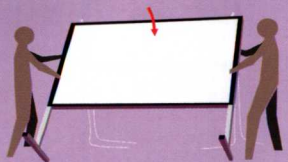

- 3 Loosen and remove the **Guide Ropes**, **Knob Screws** and **Support Rings**.

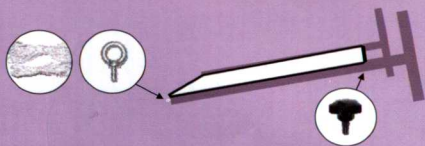


- 4 Remove the **Legs**, unlatch the hinged support bars and fold.



- 5 Detach the **Screen Material** from the **Frame** by carefully unsnapping each buttons.

- 6 Fold the **Screen Material**. In order to avoid creasing, please fold it following the instruction below:

a. Fold the long side in half.

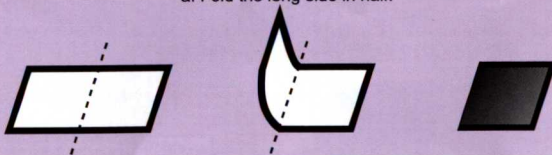


b. Then, fold in half again but keep the snaps nailed border longer than that of the other area of screen fabric.


(Do ensure the white screen material do not contact with the metal snaps on the black border, as the *snaps may scratch the screen fabric or leave deep and irreversible imprint.*)




c. Fold in half, with the two shorter sides overlapped strictly.
d. REPEAT the Procedure b. (Fold in half and keep the snaps nailed border longer than that of the other area of screen fabric.)

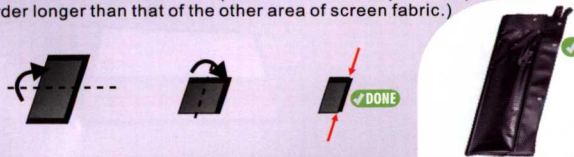


- 7 Unlatch the hinged support bars in each corner of the **Frame**.

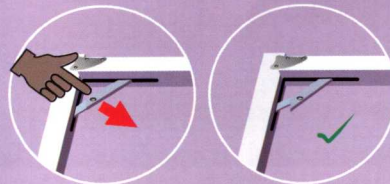

- ⑥ Press the sliver locking buttons near the folding joints, and gather the sides of the Frame.

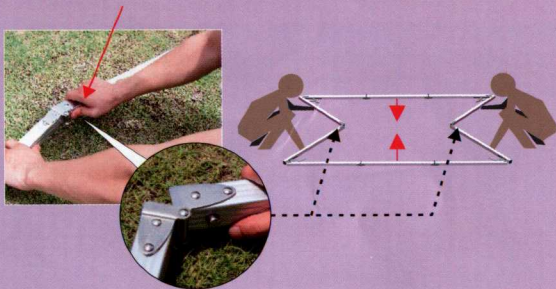

- ⑦ Again, press the sliver locking buttons on the longer sections, and fold them into thirds.

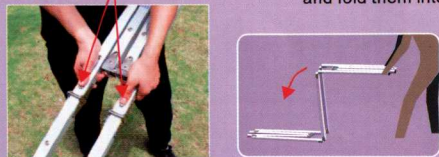

CAUTION ⚠ Watch out for pinching! Don't put your hands between the sections!



- ⑩ Put everything back in the Carry Bag. Be sure to place Folding Frame, Legs, and smaller parts into the Carry Bag first and place the Material on top to keep Material from creasing or tearing.

WARM TIPS



Dust, dirt and scratches on the projection surface will affect the picture quality, please take note of the points below to prevent that from occurring:

1. Do not touch the projection surface with your hands
2. Do not write or draw on the projection surface
3. Do not use fingers or sharp objects to point on the projection surface; this will damage the screen material.
4. Use a soft-damp cloth to clean the projection surface; do not use chemical cleaning agents or alcohol.
5. Use clean water when dampening the cleaning cloth and do not rub against the material to clean it.



After using the screen, disassemble it and store it in the carrying bag provided.



To avoid damage and injury, the screen should only be operated by adults.



How do I alleviate screen creases?

The material is folded so that it can fit into a smaller package to decrease freight cost. If you notice crease lines on the material upon opening the box, there are a couple of things that can be done to alleviate them. The easiest method would be to allow the material to stretch on the frame. Over time, the creases will alleviate to a minimal.

If after a few days you do not see any improvement, the second method in alleviating them would be the use of a hairdryer. Set the dryer on medium heat and blow on the material from its back side from about 3 feet away, concentrating only on the crease lines. Do not apply excessive heat as this will cause for the material to deform. You may need to repeat this process for a couple of consecutive days depending on the severity of the creases.



To provide the most economical means of shipping, our projection material is folded to fit in a small package. This may initially result in creases/folds on the material. These lines should dissipate over time once the material is stretched out on the frame. Please make sure to view the projected image at the minimum recommended viewing distance of 1.5 times the image width to further reduce any visible lines.



The Projector Screen can also be wall-mounted.



Assemble the Screen without the **Folding Legs**, screw the **Support Rings** in, hang the Screen on the nails or hooks you've already hammered in the wall. (nails or hooks are not included)

To avoid it falling down, do make sure:

1. the nails strong enough to hold the **Frame**
2. The **Support Rings** screws into the frame tightly.



NIGHTTIME HOTLINE
86 13038835964

EMAIL
3360242292@qq.com